



TOYOTA LANDCRUISER 200 SERIES

2007-2021

SCOUT ROOF RACK

IMPORTANT! – READ BEFORE INSTALLATION

Rated to 200 kg dynamic driving – Rack weight is 28kg – Offroad Rating is 133kg so minus the 28kg rack means you're allowed to put 105kg up there

- This product must be installed exactly as per these instructions using only hardware supplied.
- Take a few moments to read instructions thoroughly before beginning work.
- In the event of damage to any bar component please contact OFFROAD ANIMAL to arrange repair/replacement of components.
- Do not use this product for any vehicle make or model other than that specified on these instructions.
- Do not remove labels from this product.
- This product and its fixings must not be modified in any way unless stated in these fitting instructions.
- The installation of this product is recommended for trained personnel.
- These instructions are correct at time of publication. OFFROAD ANIMAL cannot be held responsible for the impact of any changes subsequently made by the vehicle manufacturer. If you find something has changed, please contact us to let us know!
- During installation it is the duty of the installer to check correct operation/clearances of all components.
- If Instructions are to be printed for reference in the workshop, it is recommended that they are printed in colour, for best legibility.

GENERAL CARE AND MAINTENANCE

Use caution when cleaning with pressure washers, as they may compromise the product coating's integrity. Exercise care to avoid surface damage.

Only wash the product with a PH neutral car wash to prevent paint damage and discolouration.

Do not use acidic or alkaline based cleaning products.

Plastic parts may be maintained with silicone spray.

It is important to perform regular checks (pre/during/post trip or on an annual basis) on the installed product. More frequent checks may be required in extreme use cases. Checks include:

- Visual inspection for damage (eg. cracks, chips, dents etc.)
- Electrical wiring is not rubbing anything or worn out
- Bolts are torqued to correct specification (see torque guide below)

For touching up small stone chips, Offroad Animal recommends the following paint products:

- Dupli-Color Trim & Bumper Paint Black (TB101)
- VHT Hood, Bumper & Trim Paint Black (SP27)

BOLT TORQUE SETTINGS

Use the following bolt torques on all general fasteners, unless otherwise specified.

GENERAL FASTENERS	
Size	Torque Nm
M5	5 Nm
M6	9 Nm
M8	22 Nm
M10	44 Nm
M12	77 Nm

Use the following bolt torques on all structural front bar mount and tow point fasteners, and rear towbar fasteners, unless otherwise specified.

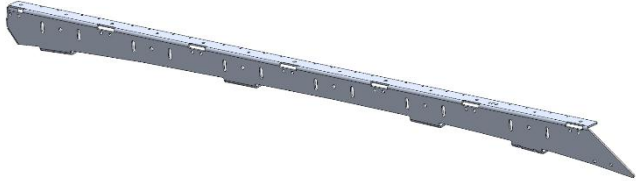
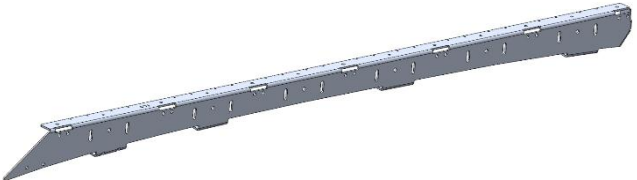
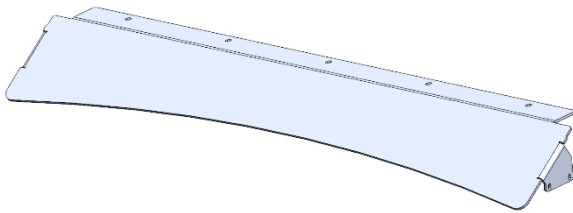

FRONT BAR MOUNTS AND TOW POINTS + REAR TOWBAR	
Size	Torque Nm
M10	57 Nm
M12	100 Nm
M14	164 Nm
M16	248 Nm

Always use a torque wrench to set correct torque settings. Ensure torque wrench is set to Nm unit of measurement. Otherwise perform conversion to lb-ft.

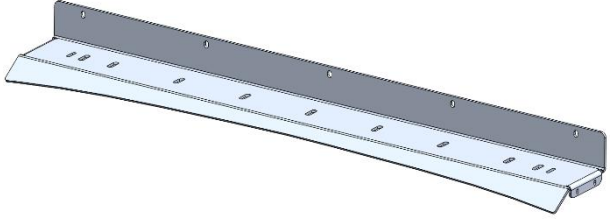
PARTS LISTING

IMPORTANT: Check all parts are present before beginning work! Contact OFFROAD ANIMAL if something is missing.

Parts – In the Main Box

Qty	Part Number	Description	Image
1	B-0887R	LC200 Scout Rack Side RH	
1	B-0887L	LC200 Scout Rack Side LH	
1	B-0888	LC200 Wind Deflector	
1	P-0302	LC200 Scout Roof Rack - Mount Spacer Plate	
2	OFA-LOGO	Offroad Animal Metal Logo	

Optional Light Bar Kit – Purchased Separately

Qty	Part Number	Description	Image
1	B-0698	Toyota LC300 - Scout Rack Light Bar Wind Deflector	

Cross Bar Kit

Qty	Part Number	Description	Image
7	E-0006-1250	Scout Roof Rack – Cross Bar Extrusion 1250MM	

Fasteners – Contained in Small Parts Kit Bag

Qty	Part Number	Description
19	M8 NUT	Hex Nut, M8x1.25 G8.8 ZP
47	M8 HD FLAT WASHER - BZP	M8 FLAT WASHER - High Tensile 19x8x2mm, ISO4042 ZnNi BLACK PASSIVATED FINISH
19	M8 X 16 BHCS BZP	SCREW, BUTTON HEAD CAP, M8X16X1.25 GR12.9, ISO4042 ZnNi BLACK PASSIVATED FINISH
28	M8 X 20 BHCS BLACK ZINC	SCREW, BUTTON HEAD CAP, M8X20X1.25, ISO4042 ZnNi BLACK PASSIVATED FINISH
8	M8X50 HEX	Bolt Hex, M8X50X1.25, GR8.8 ZP
4	M6x20 BHCS BLACK ZINC	SCREW, BUTTON HEAD CAP, M6X20X1 GR12.9, ISO4042 ZnNi BLACK PASSIVATED FINISH
4	M6 FLAT WASHER BLACK ZINC	M6 Flat Washer, 12x6.1x1, ISO4042 ZnNi BLACK PASSIVATED FINISH
4	M6 FLANGE NU	Flange Nut, M6x1 G8.8 ZP

TOOLS REQUIRED

The following tools will be required to install the product.

Hand Tools	Power Tools	Workshop Equipment
Metric Socket Set 8-19mm	N/A	Soft Blanket
Socket Extension Bar		Isopropyl Alcohol
Metric Spanner Set 10-19mm		Clean Workshop Rags
Hex (Allen) Key Set 4-6mm		Automotive Sealant (Sikaflex 227 or equivalent)
Trim Removal Tool/s		
Flat Blade Screwdriver		

WORKSHOP SAFETY

It is the responsibility of the installer to always complete works in a safe manner. Make sure the following safety equipment is available and precautions are observed whilst fitting this product.

Hearing Protection 	Always wear ear protection when using power tools.
Eye Protection 	Ensure eye protection is always worn when cutting or drilling.
Manual Handling 	Do not attempt to lift bar assemblies or rock sliders on your own. Always use two people to lift or use mechanical Lifting aid such as hydraulic lifting trolley.
Vehicle Support 	Always ensure vehicle is properly supported when working on it. Do not attempt to fit products whilst suspension work is being carried out. Do not work under a vehicle supported only by a jack.



1. If your vehicle has factory roof rails, these will need to be removed.	TOOLS REQUIRED
	FASTENERS

	
2. Using a rag covered screwdriver or trim tool, release the clips securing the front roof rail cover. 3. Remove the front cover and repeat the same process for the rear cover.	TOOLS REQUIRED Trim tool or Flat head screwdriver Rag
	FASTENERS



4. Using a rag covered screwdriver or trim tool, lever the centre cover off the rail from one of the inside edges.
5. Pull outwards to remove the centre cover.
6. Remove the 12mm head bolt securing the roof rail to the centre rail bracket.

TOOLS REQUIRED

Trim tool
or
Flat head screwdriver

Rag
12mm socket/spanner

FASTENERS



7. Remove the 4x 12mm head bolts securing the front and rear of the roof rail to the roof. Take care to remove the bolts progressively in pairs (not one-by-one) so that the captive nutplate inside the roof doesn't dislodge and fall out. If it does then the headliner needs to be removed to retrieve it. Retain the fasteners for later use.	TOOLS REQUIRED 12mm socket/spanner
	FASTENERS 4x Factory 12mm head bolt (do not discard)



8. Remove the roof rail from the vehicle roof.
9. Remove the 2x 12mm head bolts securing the centre rail bracket to the roof.

Again, take care to remove the bolts progressively in pairs.

Retain the fasteners for later use.

TOOLS REQUIRED

12mm socket/spanner

FASTENERS



10. This applies to all vehicles, regardless of whether they have factory fitted rails or not. Remove the plastic trim/s by pushing in the direction of the arrows shown and lifting it off the roof.

11. Remove the 2x 12mm head bolts securing the placeholder rail bracket to the roof.

Again, take care to remove the bolts progressively in pairs.

Retain the fasteners for later use.

12. Repeat steps 2-11 for the other side of the vehicle.

TOOLS REQUIRED

12mm socket/spanner

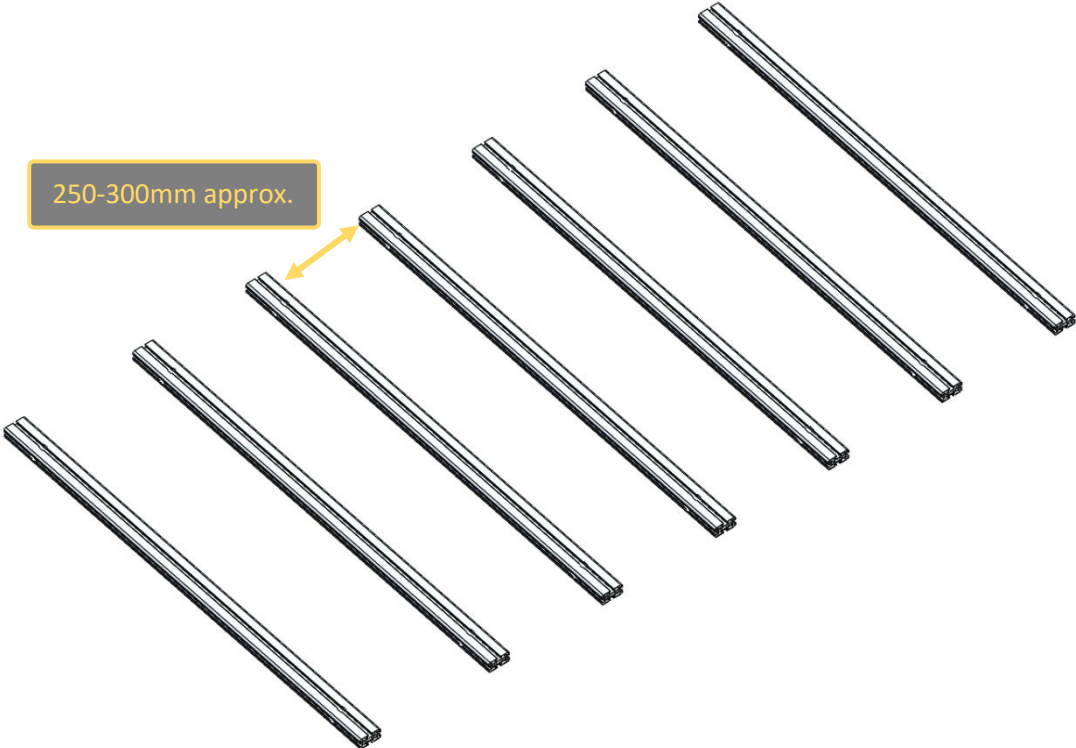
FASTENERS

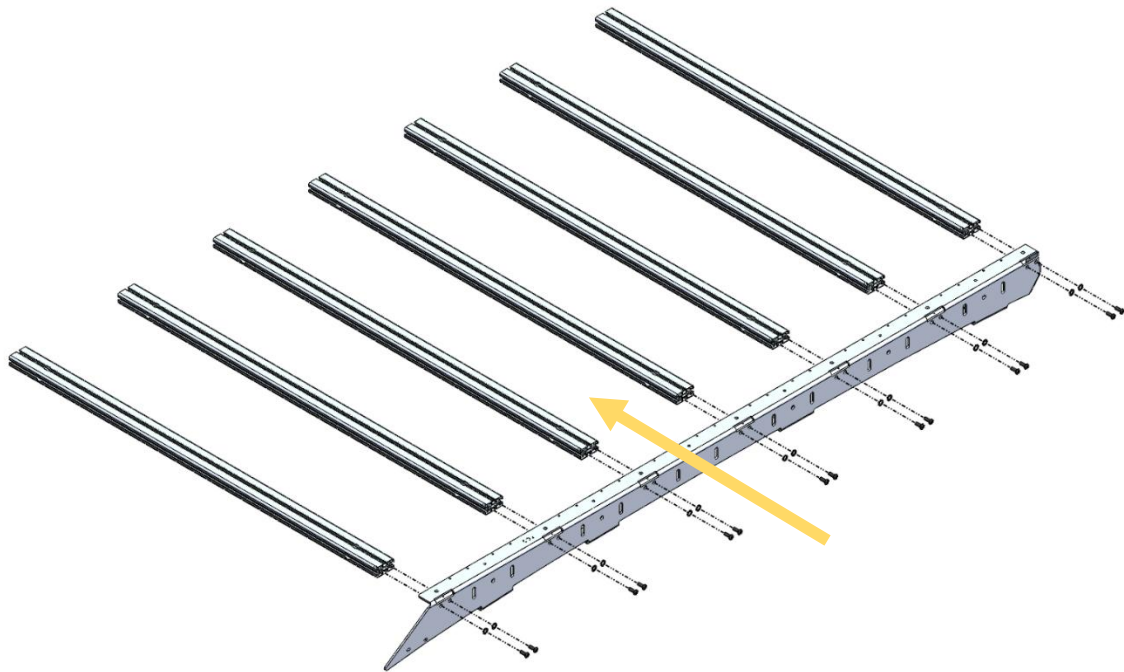


13. Clean the areas surrounding the mounting points in all 8x spots on the roof with a rag and isopropyl alcohol or other cleaning solvent. 14. Take care not to push down on the yellow protruding plastic nut guides.	TOOLS REQUIRED Rag Isopropyl alcohol
	FASTENERS



15. Apply a bead of sealant around the holes and along the bottom of the mount plates as shown in the image above. 16. Place the mount points onto the roof, locating over the yellow protruding plastic nut guides.	TOOLS REQUIRED Automotive grade sealant
	FASTENERS

	
17. Assemble the roof rack. Start by setting out the 7x cross bar extrusions on a table/open space. Position them so that they sit approximately 250-300mm apart (inside face to inside face).	TOOLS REQUIRED
	FASTENERS



18. Fit the rack side plate to the extrusion.

This is easiest to do when the ends of the extrusion are overhanging an edge of a table/workbench.

19. Secure with M8x20mm button head bolts and M8 flat washers as shown. Do not fully tighten at this stage.

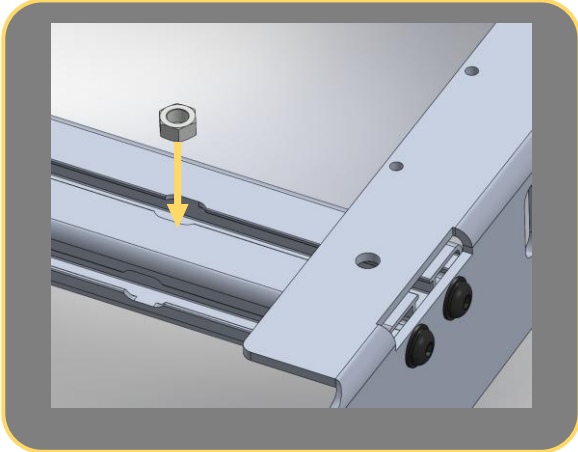
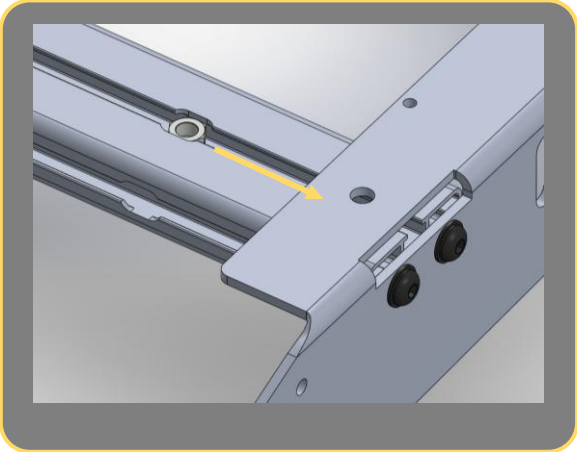
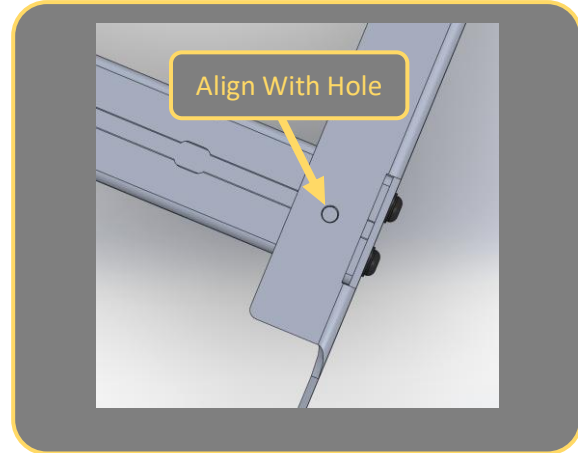
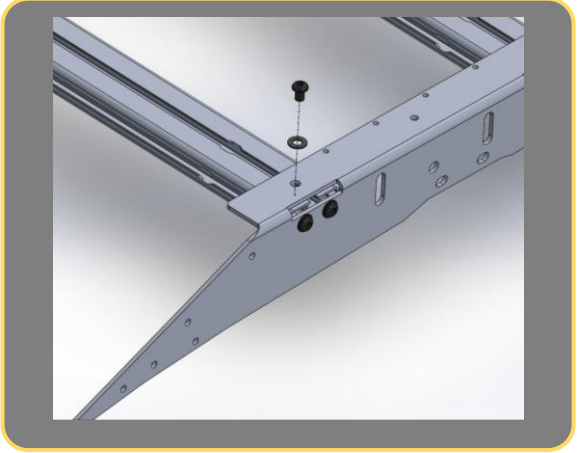
20. Also complete for the other rack side plate.

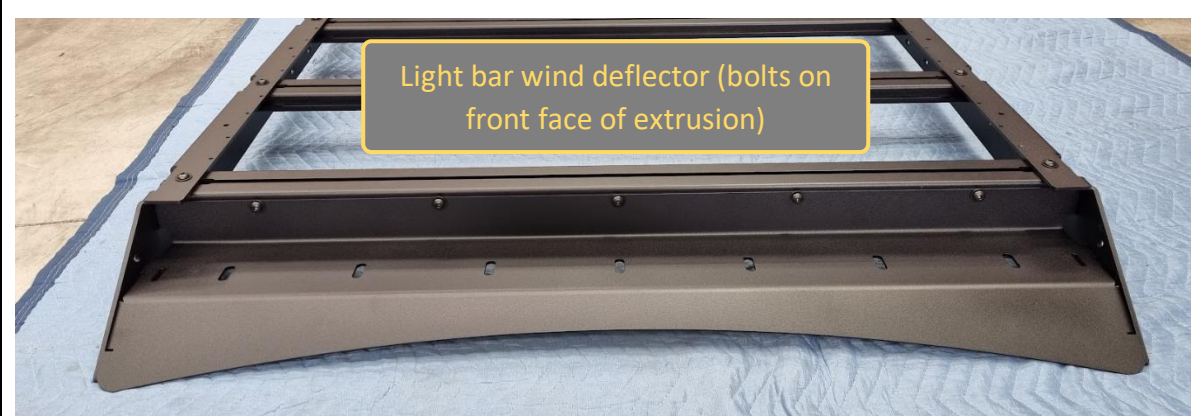
TOOLS REQUIRED

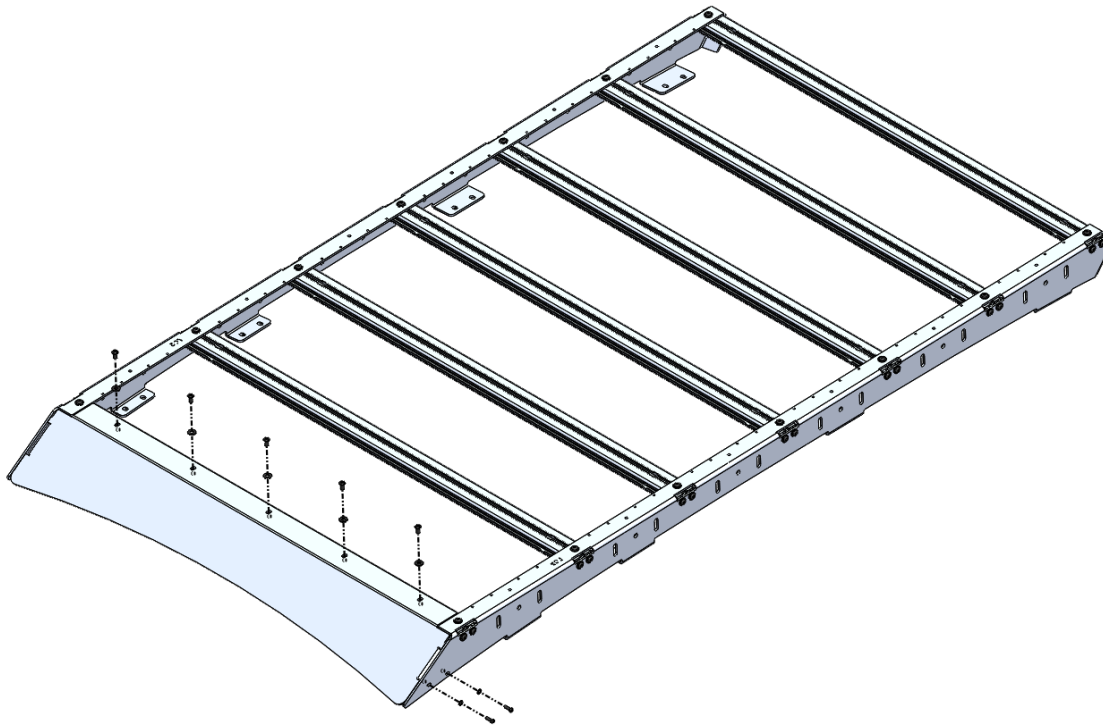
5mm hex/Allen key

FASTENERS

28x M8x20 button head
28x M8 flat washer

   	
21. Insert 1x M8 hex nut into each end of the extrusion slot for securing the top face of the rack side plate. 22. Drop the nut into the slot in the extrusion, then slide the nut along the slot and align it with the hole in the top of the side plate. 23. Secure with M8x16mm button head bolt and washer. Do not fully tighten at this stage. 24. Complete steps for the other side of the rack assembly.	TOOLS REQUIRED 5mm hex/Allen key
	FASTENERS 14x M8x16 button head 14x M8 flat washer 14x M8 hex nut

	
	
25. Fit your wind deflector of choice. 26. For the standard wind deflector, insert 5x M8 nuts into the top T-slot of the forward-most extrusion, evenly spaced. 27. For the optional light bar wind deflector, insert 5x M8 nuts into the front facing T-slot of the forward-most extrusion, evenly spaced. 28. Secure your wind deflector to the extrusion with 5x M8x16 button head bolts and black washers. Do not fully tighten.	TOOLS REQUIRED 5mm hex (Allen) key
	FASTENERS 5x M8x16 button head 5x M8 flat washer 5x M8 nut



29. Secure your wind deflector to the rack sides with 4x M6x20 button head bolts, washers and flange nuts (2x per side).
30. If required, fit the light bar onto the light bar wind deflector now.
31. At this stage, leave all bolts on the roof rack loose.

TOOLS REQUIRED

4mm hex (Allen) key
10mm socket/spanner

FASTENERS

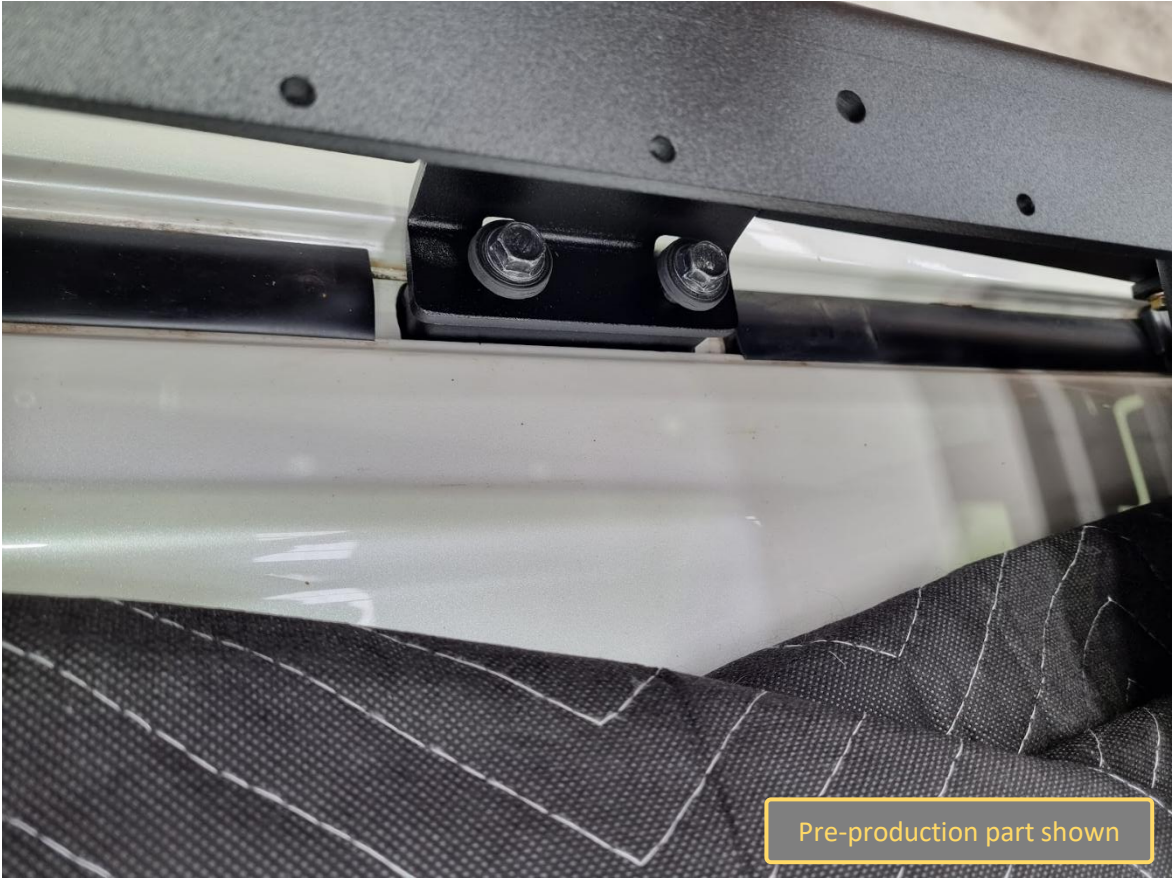
4x M6x20 button head
4x M6 flat washer
4x M6 flange nut

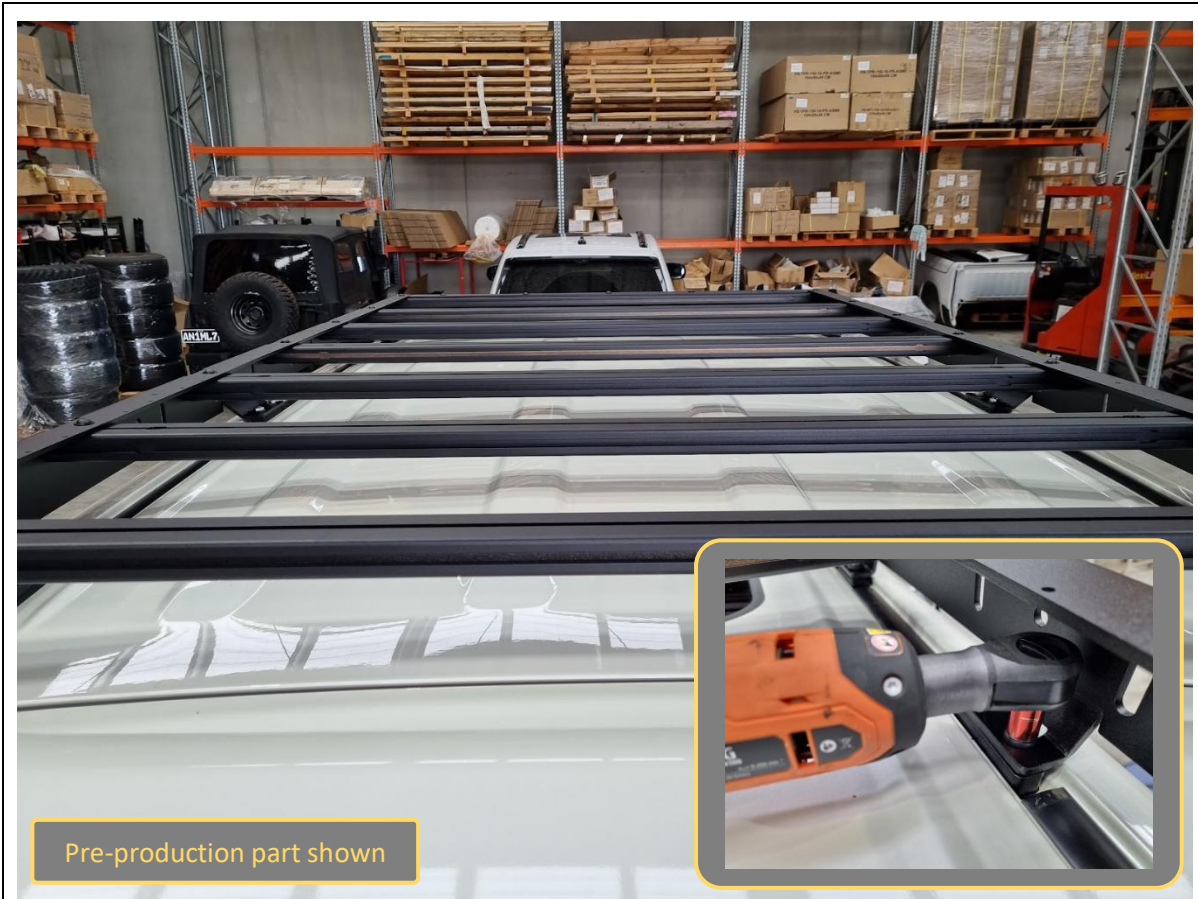


32. Place a soft blanket on the roof in between the roof channels to protect the paintwork while the roof rack is installed.	TOOLS REQUIRED Soft blanket
	FASTENERS

		
33. With your mate's assistance, lift and place the roof rack onto the roof. Position the rack such that the mounting slots on the rack sides align with the holes on the previously installed mounting plates.	TOOLS REQUIRED	
	FASTENERS	

	
	
	
34. Remove the rubber sealing washers and rings from the 8x short (approx. 25mm) factory fasteners. 35. Fit the rubber seals onto the supplied 8x M8x50mm hex bolts.	TOOLS REQUIRED
	FASTENERS 8x M8x50 hex bolt

 Pre-production part shown		
36. Loosely secure the roof rack to the roof with the long rubber sealed factory fasteners and supplied M8x50 hex bolts from the previous step.	TOOLS REQUIRED 12mm socket/spanner 13mm socket/spanner	
	FASTENERS 8x long factory fasteners 8x M8x50 hex bolt	



37. Align the roof rack so that it is centred left-to-right on the roof.
38. Once happy with alignment, torque all bolts holding the rack to the roof, and all button head bolts holding the extrusion together on the rack.

TOOLS REQUIRED

12mm socket/spanner
13mm socket/spanner
4/5/6mm hex/Allen key

FASTENERS

		
39. Lucky last step, make sure you put on the logo plates or bad luck will befall you for the next year.	TOOLS REQUIRED	
	FASTENERS	



Congratulations! You're done!
Go out bush and enjoy carrying all your gear on our light weight, low profile and quiet Scout Roof Rack.