



## Jeep Grand Cherokee WK2

2011-2021

### Rock Sliders with Step

#### **IMPORTANT! – READ BEFORE INSTALLATION**

- When installed in accordance with these instructions, the front protection bar does not affect the operation of the vehicles Curtain airbags.
- This product must be installed exactly as per these instructions using only hardware supplied.
- Take a few moments to read instructions thoroughly before beginning work.
- In the event of damage to any component please contact OFFROAD ANIMAL to arrange repair/replacement of components.
- Do not use this product for any vehicle make or model other than that specified on these instructions.
- Do not remove labels from this product.
- This product and its fixings must not be modified in any way unless stated in these fitting instructions.
- The installation of this product is recommended for trained personnel.
- These instructions are correct at time of publication. OFFROAD ANIMAL cannot be held responsible for the impact of any changes subsequently made by the vehicle manufacturer. If you find something has changed please contact us to let us know!
- During installation it is the duty of the installer to check correct operation/clearances of all components.
- If Instructions are to be printed for reference in the workshop, it is recommended that they are printed in colour, for best legibility.
- Fitting Time: 3 hours

## GENERAL CARE AND MAINTENANCE

Only wash the product with a PH neutral car wash to prevent paint damage and discolouration.

Plastic parts may be maintained with silicone spray.

Do not use acidic or alkaline based cleaning products.

It is important to perform regular checks (pre trip or on an annual basis) on the installed product. Checks include:

- Visual inspection for damage (eg. cracks, chips, dents etc.)
- Electrical wiring is not rubbing anything or worn out
- Bolts are torqued to correct specification (see torque guide below)

For touching up small stone chips, Offroad Animal recommends the following paint products:

- Dupli-Color Trim & Bumper Paint Black (TB101)
- VHT Hood, Bumper & Trim Paint Black (SP27)

## BOLT TORQUE SETTINGS

Use the following bolt torques on all fasteners, unless otherwise specified.

Always use a torque wrench to set correct torque settings. Ensure torque wrench is set to Nm unit of measurement. Otherwise perform conversion to lb-ft.

Size	Torque Nm
M5	5 Nm
M6	9 Nm
M8	22 Nm
M10	44 Nm
M12	77 Nm

## PARTS LISTING

**IMPORTANT:** Check all parts are present before beginning work! Contact OFFROAD ANIMAL if something is missing.

### Main Parts – In the Box

Qty	Part Number	Description	Image
1	RS-JGC-WK2-11-ASM1R	Wk2 Slider Weldment RH	
1	RS-JGC-WK2-11-ASM1L	Wk2 Slider Weldment LH	
2	B-0084	Slider Step	

**Small Parts – Contained in Small Parts Kit Bag**

Qty	Part Number	Description
<b>12</b>	NP-COM-M10-190-ASM0	M10 Lollypop Nut Plate
<b>2</b>	OFA-Logo	Offroad Animal Metal Logo plate
<b>12</b>	M8x20 BHCS B/Z	M8 x 20 Button Head Cap Screw, Black Zinc
<b>12</b>	M8 FW B/Z	M8 Flat Washer Black zinc
<b>12</b>	M6x16 BHCS B/Z	M6 x 16 Button Head Cap Screw Black Zinc
<b>12</b>	M6 FW B/Z	M6 Flat Washer Black zinc
<b>12</b>	M6 NUTSERT	M6 NUTSERT
<b>14</b>	M8 CAP SCREW	M8 X 30 CAP SCREW ZP
<b>14</b>	M8 FW	M8 FLAT WASHER
<b>12</b>	M10 X 30	M10 X 30 HEX BOLT ZP 8.8
<b>12</b>	M10 FW	M10 FLAT WASHER

## TOOLS REQUIRED

The following tools will be required to install the product.

Hand Tools	Power Tools	Workshop Equipment
<ul style="list-style-type: none"><li>-16 or 5/8 Spanner</li><li>-4mm Allen Key</li><li>-5mm Allen Key</li><li>-6mm Allen Key</li><li>-Nutsert Gun</li><li>-Centre punch</li><li>-9mm Drill bit (or imperial equivalent)</li><li>-13mm Drill Bit or equivalent</li><li>-Flat Screw driver or trim tool</li><li>-Paint Pen or equivalent</li><li>-Caulking gun</li></ul>	<ul style="list-style-type: none"><li>Power Drill</li></ul>	<ul style="list-style-type: none"><li>-Trolley, bottle, or scissor Jack</li><li>-Nutsert Gun</li><li>-Silicon sealant</li></ul>

## WORKSHOP SAFETY

It is the responsibility of the installer to always complete works in a safe manner. Make sure the following safety equipment is available and precautions are observed whilst fitting this product.

<p>Hearing Protection</p> 	<p>Always wear ear protection when using power tools.</p>
<p>Eye Protection</p> 	<p>Ensure eye protection is always worn when cutting or drilling.</p>
<p>Manual Handling</p> 	<p>Do not attempt to lift bar assemblies or rock sliders on your own.</p> <p>Always use two people to lift or use mechanical Lifting aid such as hydraulic lifting trolley.</p>
<p>Vehicle Support</p> 	<p>Always ensure vehicle is properly supported when working on it. Do not attempt to fit products whilst suspension work is being carried out. Do not work under a vehicle supported only by a jack.</p>



1. Using your trim tool or flat head screw driver remove plastic rivets holding ends of plastic trim on.
2. Remove M6 screw with 10mm spanner.
3. Remove plastic rivets on underside as well

If mud flaps are fitted retain hardware to reinstall.

**Tools Required**

Trim tool, or flat head screw  
driver  
10mm spanner

**Fasteners**


Discard plastic rivets  
Retain any bolts/screws





4. Pry off plastic trim.	<b>Tools Required</b>  Use hand or pry tool
	<b>Fasteners</b>



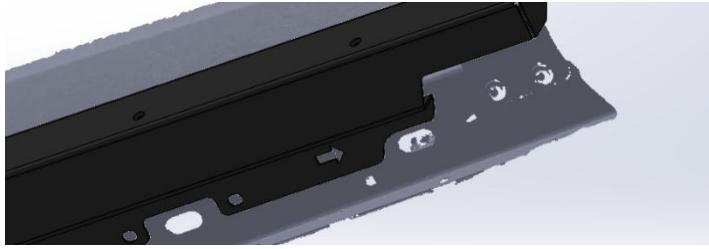

5. Using a jack lift the slider up to body of the Jeep. Line it up centrally front to back. See pull out picture above showing cut outs lined up with large oval holes in body. Make sure the laser cut arrow in slider faces forward

**It is very important you position the slider correctly against the body of the Jeep where the side flange near the doors sits flat against it. If not flat your slider will tilt up and cause the step to hit the door.**

#### TOOLS REQUIRED

Jack

#### FASTENERS



<div>6. Mark all holes to be drilled on the side (6) and underneath (6)</div> <div>7. Remove slider away from Jeep</div>	<div>TOOLS REQUIRED</div> <div>Paint pen or equivalent</div>
	<div>FASTENERS</div>



8. Centre punch all marked holes.

**TOOLS REQUIRED**

Centre Punch

**FASTENERS**



9. Drill out all marked holes. Holes on sides to 9mm (or imperial equivalent.) A 5mm pilot hole will make this step easier. On the side holes you will drill through two layers of steel.
10. Holes on underside are clearance for M10 bolt. Offroad Animal suggests 13mm but anything between 10mm-13mm will work. A 5mm pilot hole will make this step easier
11. Paint all drilled edges to prevent rusting

**TOOLS REQUIRED**

Power Drill  
9mm Drill bit  
13mm drill bit  
and if you want a 5mm drill bit  
  
Paint Pen

**FASTENERS**



12. Install 6x M6 Nutserts in side of Jeep.

**TOOLS REQUIRED**

Nutsert Gun

**FASTENERS**

M6 Nutserts (6)





13. Lift Slider back on to Jeep and secure with M6 Button head cap screws into side of jeep. Leave these loose.

**TOOLS REQUIRED**

4mm Allen Key  
Jack

**FASTENERS**

M6x16 BHCS (6)



14. Remove rubber bungs on underside.

15. Position in M10 lollipop nut plate and secure with M10 bolts. Leave loose.

16. Either cut off or push stems of nut plates into body and push rubber bungs back into place.

**TOOLS REQUIRED**

16mm socket or spanner  
Pry tool

**FASTENERS**

M10 x 30 Hex bolt (6)  
M10 Flat Washers (6)  
M10 Lollipops (6)





17. Once all bolts have been started, Torque down each bolt and screw

**TOOLS REQUIRED**

- 4mm Allen key
- 16mm Socket

**FASTENERS**



18. Position tread step up on to slider.

19. Secure with M8 button head cap screws(6). Leave these loose.

**TOOLS REQUIRED**

5mm Allen Key

**FASTENERS**

M8 x 20 BHCS  
M8 Flat Washers



20. Insert M8 Cap screws(7) through side window holes.

21. Once all have been started Torque down all screws and bolts

**TOOLS REQUIRED**

6mm Allen Key

**FASTENERS**

M8x30 Cap Screw (7)  
M8 flat washers (7)




22. Peel off backing and stick logo plate in centre of slider step

**TOOLS REQUIRED****FASTENERS**



23. Run a bead of Silicone along top edge of slider to prevent debris falling and settling behind slider.	<b>TOOLS REQUIRED</b>  Caulking Gun Silicone Sealant
	<b>FASTENERS</b>

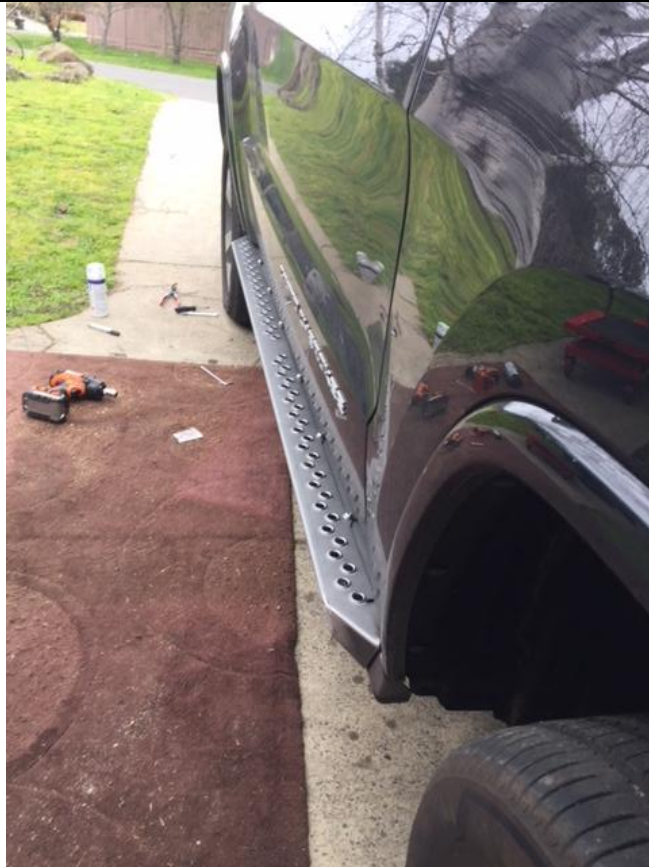

24. One side is finished, repeat for other side.

You're all done now, enjoy the extra protection.

**TOOLS REQUIRED****FASTENERS**