



FORD RANGER / EVEREST NEXT GEN MY2022+ FLARE FINISHER KITS

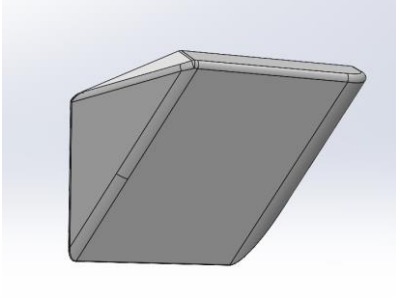
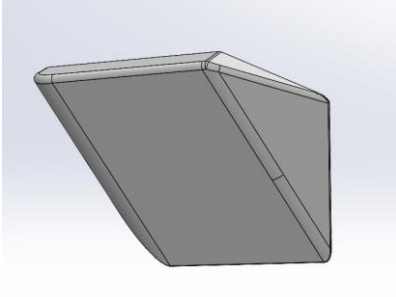
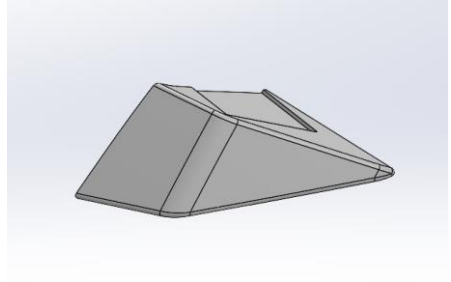
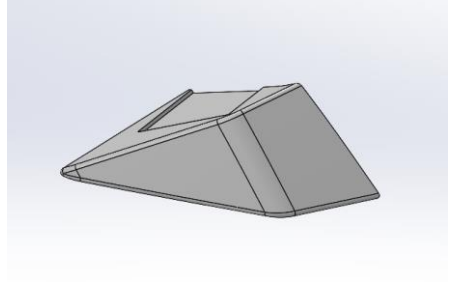

IMPORTANT! – READ BEFORE INSTALLATION

- When installed in accordance with these instructions, the front protection bar does not affect the operation of the vehicles SRS airbags.
- This product must be installed exactly as per these instructions using only hardware supplied.
- Take a few moments to read instructions thoroughly before beginning work.
- In the event of damage to any bar component please contact OFFROAD ANIMAL to arrange repair/replacement of components.
- Do not use this product for any vehicle make or model other than that specified on these instructions.
- Do not remove labels from this product.
- This product and its fixings must not be modified in any way unless stated in these fitting instructions.
- The installation of this product is recommended for trained personnel.
- These instructions are correct at time of publication. OFFROAD ANIMAL cannot be held responsible for the impact of any changes subsequently made by the vehicle manufacturer. If you find something has changed please contact us to let us know!
- During installation it is the duty of the installer to check correct operation/clearances of all components.
- If Instructions are to be printed for reference in the workshop, it is recommended that they are printed in colour, for best legibility.

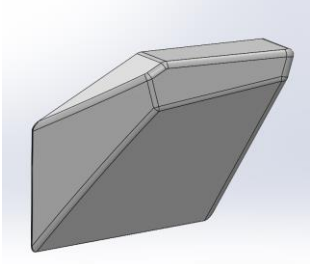
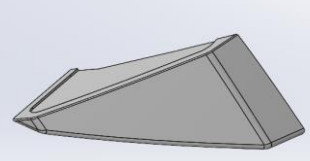

PARTS LISTING

IMPORTANT: Check all parts are present before beginning work! Contact OFFROAD ANIMAL if something is missing.

FORD RANGER KIT – In the Box

Qty	Part Number	Description	Image
1	F-0019L	Ford Ranger Next Gen Wing Finisher	
1	F-0019R	Ford Ranger Next Gen Wing Finisher	
1	F-0018L	Ford Ranger Next Gen Flare Finisher	
1	F-0018L	Ford Ranger Next Gen Flare Finisher	
1	TK-COM-FLCAP	Tape Kit - Flare Cap Kit 6x 100x6mm 3M Tape + Primer 94 Ampule	

FORD EVEREST KIT – In the Box

Qty	Part Number	Description	Image
1	F-0021L	Ford Everest Next Gen Wing Finisher	
1	F-0021R	Ford Everest Next Gen Wing Finisher	
1	F-0020L	Ford Everest Next Gen Flare Finisher	
1	F-0020L	Ford Everest Next Gen Flare Finisher	
1	TK-COM-FLCAP	Tape Kit - Flare Cap Kit 6x 100x6mm 3M Tape + Primer 94 Ampule	

TOOLS REQUIRED

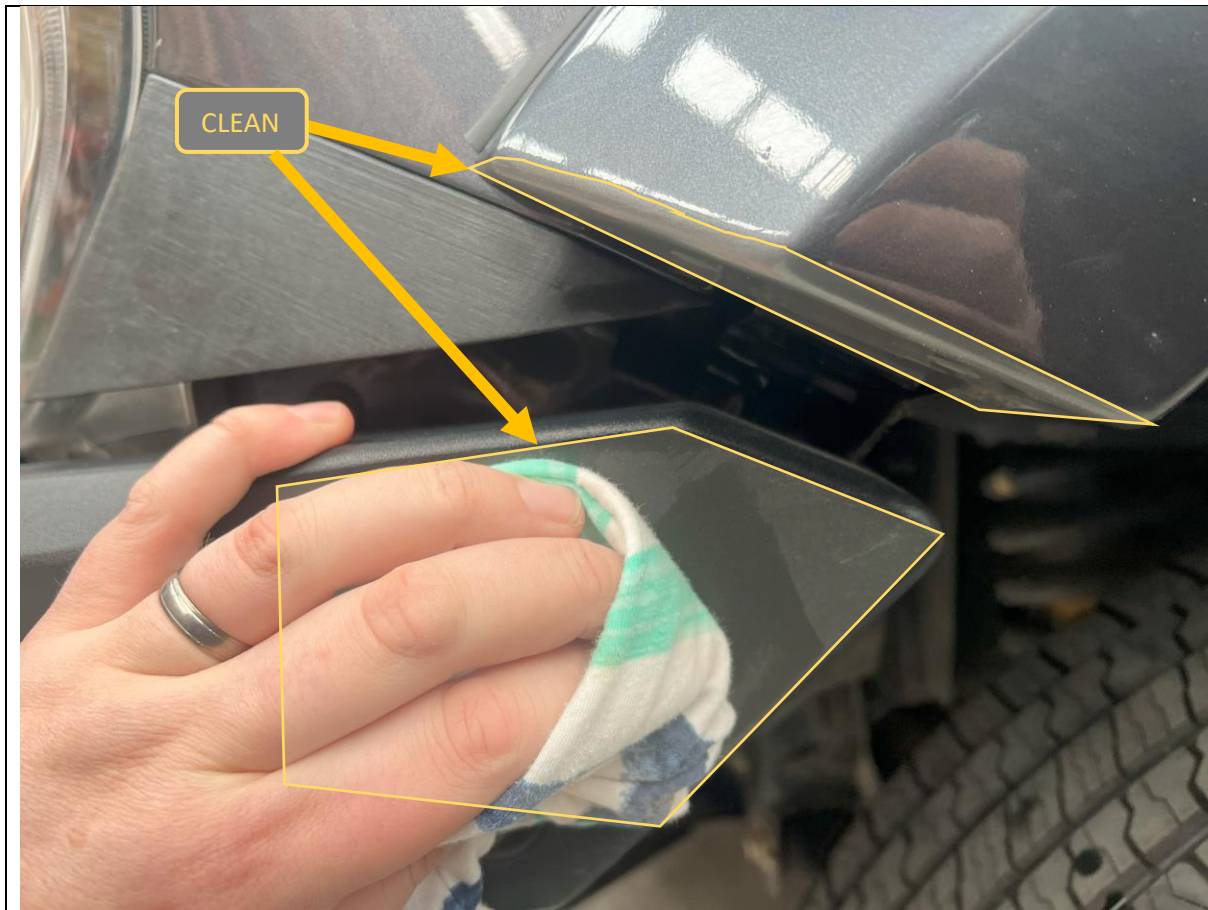
The following tools will be required to install the product.

Hand Tools	Power Tools	Workshop Equipment
Rags Side Cutters / Scissors Pick Set (optional)	None	Isopropyl Alcohol

WORKSHOP SAFETY

It is the responsibility of the installer to always complete works in a safe manner. Make sure the following safety equipment is available and precautions are observed whilst fitting this product.

<p>Hearing Protection</p> 	<p>Always wear ear protection when using power tools.</p>
<p>Eye Protection</p> 	<p>Ensure eye protection is always worn when cutting or drilling.</p>
<p>Manual Handling</p> 	<p>Do not attempt to lift bar assemblies or rock sliders on your own.</p> <p>Always use two people to lift or use mechanical Lifting aid such as hydraulic lifting trolley.</p>
<p>Vehicle Support</p> 	<p>Always ensure vehicle is properly supported when working on it. Do not attempt to fit products whilst suspension work is being carried out. Do not work under a vehicle supported only by a jack.</p>



<ol style="list-style-type: none"> 1. These instructions show the fitment of Everest Flare Kit. Procedure is the same for Ranger Kit. 2. Ensure that Offroad Animal front bar and Ford Factory Flare kit are properly installed prior to starting. 	<p>TOOLS REQUIRED</p> <p>Rag Isopropyl Alcohol</p>
<ol style="list-style-type: none"> 3. Clean the area the flare and wing finishers are to be fitted on the end of the flare and wing with isopropyl alcohol and a rag. 4. Clean the fitment area on both sides of the vehicle 	<p>FASTENERS</p>



5. Clean the Recessed bonding areas on the flare and wing finishers with isopropyl alcohol and a rag.
6. Clean the bonding area on all parts

TOOLS REQUIRED

Rag
Isopropyl Alcohol

FASTENERS



7. Squeeze the 3M Primer 94 Ampule in the location indicated to break the bulb and activate primer dispensing.
8. Apply the 3M Primer 94 to the bonding area on all parts.

TOOLS REQUIRED

3M Primer 94 Ampule

FASTENERS

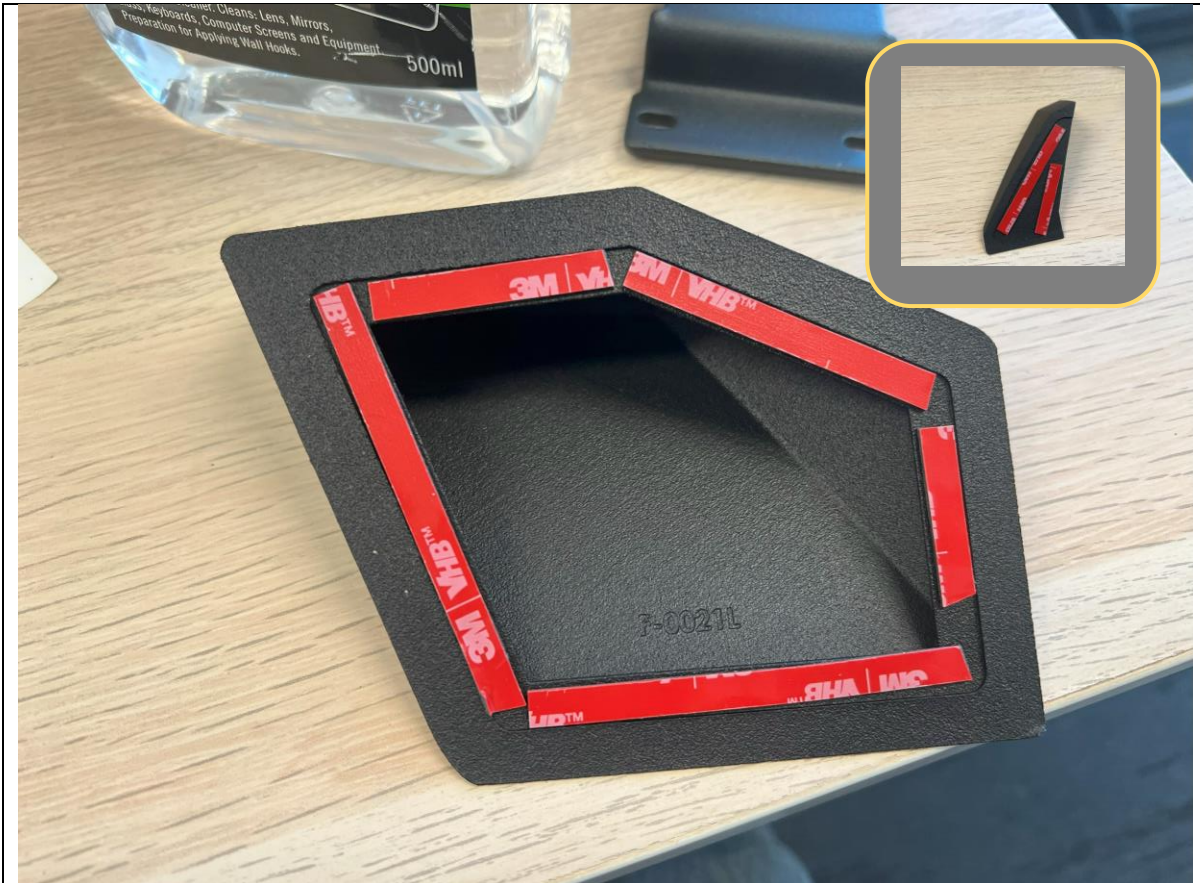


9. Using the parts as a guide, apply 3M Primer 94 to the bonding area on the end of the flare and the bulbar wing

TOOLS REQUIRED

3M Primer 94 Ampule

FASTENERS



10. Using Supplied Strips of 3M VHB tape, cut and apply to the recessed bonding areas on the wing and flare finisher parts as shown.

TOOLS REQUIRED

3M VHB Tape Strips
Scissors / Side Cutters

FASTENERS



11. Hold up the finishers in the locations shown to familiarize yourself with the correct alignment before removing backing tape.
12. Remove the backing from the VHB Tape. A 90-degree pick can make this task easier.
13. Adhere the finishers in position, holding firmly for 20-30 seconds to allow a strong bond to form.

TOOLS REQUIRED

90deg Pick

FASTENERS



AND YOU ARE DONE! ENJOY THE TOUGH NEW LOOK!