



Jeep Grand Cherokee WK2

MY2011-2019

Bash Plate

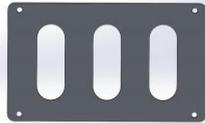
IMPORTANT! – READ BEFORE INSTALLATION

- This product must be installed exactly as per these instructions using only hardware supplied.
- Take a few moments to read instructions thoroughly before beginning work.
- In the event of damage to any component please contact OFFROAD ANIMAL to arrange repair/replacement of components.
- Do not use this product for any vehicle make or model other than that specified on these instructions.
- This product and its fixings must not be modified in any way unless stated in these fitting instructions.
- The installation of this product is recommended for trained personnel.
- These instructions are correct at time of publication. OFFROAD ANIMAL cannot be held responsible for the impact of any changes subsequently made by the vehicle manufacturer. If you find something has changed please contact us to let us know!
- During installation it is the duty of the installer to check correct operation/clearances of all components.
- If Instructions are to be printed for reference in the workshop, it is recommended that they are printed in colour, for best legibility.
- Fitting time: 30 min

PARTS LISTING

IMPORTANT: Check all parts are present before beginning work! Contact OFFROAD ANIMAL if something is missing.

Main Parts – In the Box

Qty	Part Number	Description	Image
1	B-0023	Wk2 BASH PLATE	
1	P-0016	WK2 BASH PLATE COVER PLATE	

Small Parts – Contained in Small Parts Kit Bag

Qty	Part Number	Description
4	M6 x 16 BHCS BZ	M6 x 16 Button Head Cap Screws, Black Zinc
4	M6 FW BZ	M6 Flat Washer Black Zinc
2	M8 x 55 BHCS	M8 x 55 Button Head Cap screw zinc
2	M8 FW	M8 Flat washer
1	OFA-Logo	Offroad Animal Metal logo

TOOLS REQUIRED

The following tools will be required to install the product.

Hand Tools	Power Tools	Workshop Equipment
10mm Spanner or 10mm Socket 13mm Socket or 13mm Spanner Ratcheting Socket Wrench 4mm Allen Key 5mm Allen Key	None	None

GENERAL WARNINGS

The access panel is designed for V8 models maintenance however it does suit all models.

This bad boy should protect you from serious rocks, but watch the rest of your jeep.



1. First step is to remove the lower air damn fascia. To do this climb under your Jeep and remove all 5 quarter turn clips by hand. Two are tucked up high in each corner and 3 in the middle
2. Once they are removed pull the entire lower air damn away from Jeep by hand.

TOOLS REQUIRED

None

FASTENERS

Retain



3. Remove factory Lower Radiator Cover. 3x M6 bolts on front and 2x M8 bolts on back. Use 10mm socket or spanner for front and 13mm for rear

TOOLS REQUIRED

10mm Socket or Spanner
13mm Socket or Spanner

FASTENERS

Retain for reuse



4. Position bash plate up to where factory cover was

TOOLS REQUIRED

FASTENERS



5. Reuse factory hardware and secure front of plate to cross member

TOOLS REQUIRED

10mm socket or spanner

FASTENERS

Reuse Factory hardware



6. Fit M8 Button head cap screws to rear of bash plate in factory threaded clips

TOOLS REQUIRED

5mm Allen Key

FASTENERS

M8 BHCS (2)
M8 Flat washers (2)



7. Fit cover panel with M6 button head cap screws and washers

TOOLS REQUIRED

4mm Allen Key

FASTENERS

M6 x 16 BHCS (4)
M6 Flat washer (4)



8. Refit lower skid and air damn with factory hardware.
9. Now you're ready to rock and roll (hahaha did you get my joke there. It's ok if you didn't)

TOOLS REQUIRED

FASTENERS

Factory hardware

<p>10. Refit lower skid and air damn with factory hardware. 11. You're now down. Enjoy your new tow points and always pull from both points with an equalizing strap</p>	TOOLS REQUIRED 10mm spanner or socket 13mm spanner or socket
	FASTENERS Factory hardware